 


Operation Guide

17" TFT LCD Monitor
On Screen Display Control
1280 X 1024 Max. Resolution
Touch Screen Function

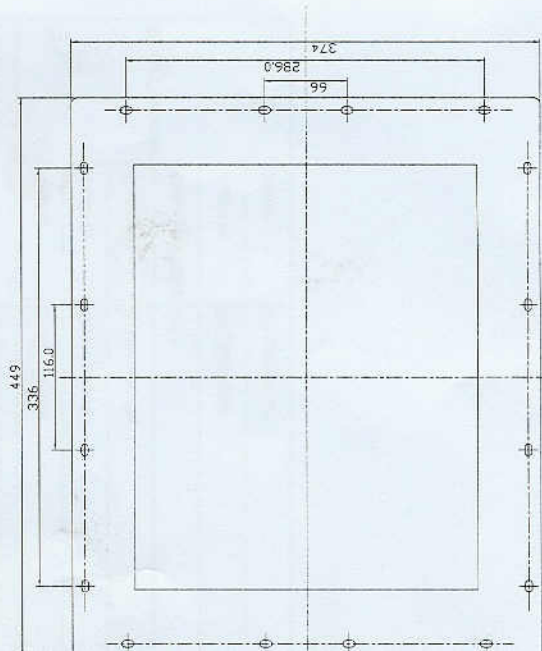

R006225900

Package Contents


Included with your LCD monitor are following items:

- 17" TFT liquid crystal monitor
- D-sub 15 pin signal cable
- AC power cable
- Power adapter
- Operation guide
- RS232 cable for touch screen function

Product Features

- High contrast color TFT LCD display support resolution up to SXGA 1280x1024. Compatible with IBM VGA, VESA, and Macintosh standards.
- Power management system conforms to VESA DPMS standard.
- Embedded universal power system.
- Support DDC1/2B for Plug & Play compatibility.
- Advanced OSD control for picture quality adjustment.
- Touch screen function.


Key Control / Indicator

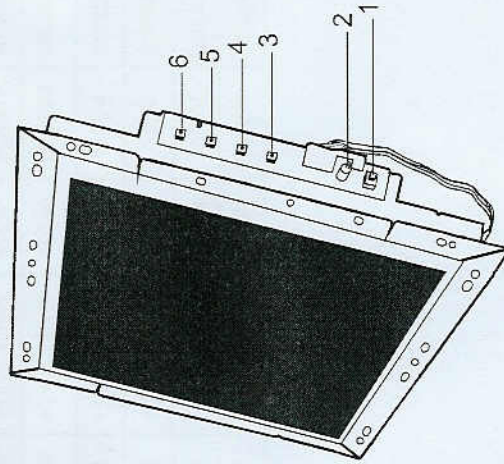

1. **Power Switch** Pressing this button turns the display system power on or off.
2. **Power LED** This LED indicates different status when this unit operates in different modes.
3. **Menu/Select** Pressing this button pops up the OSD menus on the screen, and used to select ("Up" direction) the OSD control options on the screen.

4. **Menu/Select** Pressing this button pops up the OSD menus on the screen, and used to select ("Down" direction) the OSD control options on the screen.
5. **+** This button is used to adjust the increasing value of the selected OSD control option.
6. **-** This button is used to adjust the decreasing value of the selected OSD control option

Connector

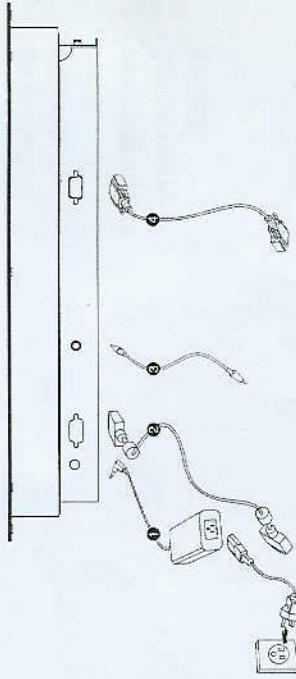

1. **Power Connector** Connect one end of the power adapter (1) to the monitor and the other end to the connector of the power cord.
2. **Signal Connector** Connect one end of the VGA D-sub 15 pin signal cable (2) to the monitor and connect the other end to the graphics card adapter on your computer. Tighten by turning clockwise the two thumb screws to ensure proper grounding.
3. **Audio-in** (earphone jack) Connect one end of the audio cable (3) to audio-in connector of the monitor and the other end of computer's audio-out connector.
4. **Touch** This is for connecting the touch panel RS-232 connector.

Adjusting with the OSD Control

To Display and Select the OSD Functions:

1. Press **▲**, **▼**, **+**, or **-** once pops up the OSD function main menu.
2. Press **▲** or **▼** a second time to select the different OSD control.
3. Press **+** or **-** button changes the value of the selected OSD control option.